
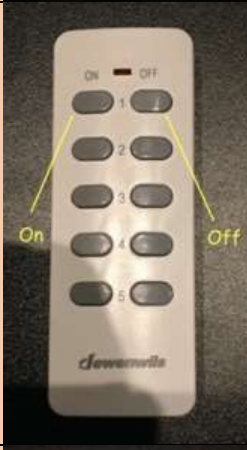




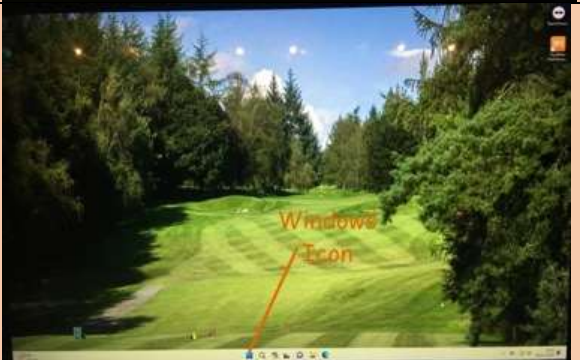
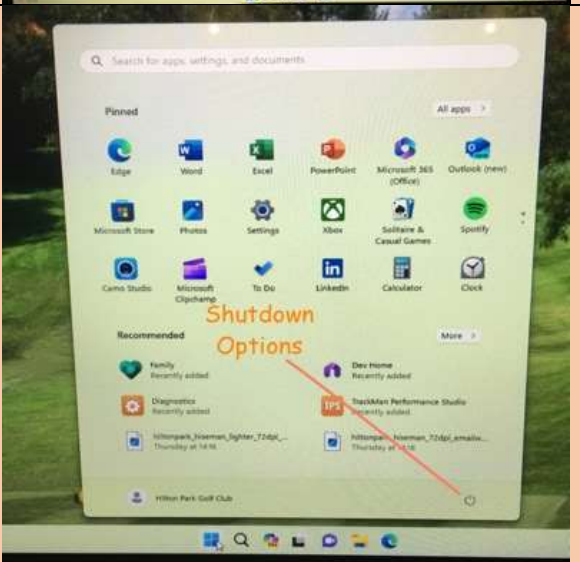
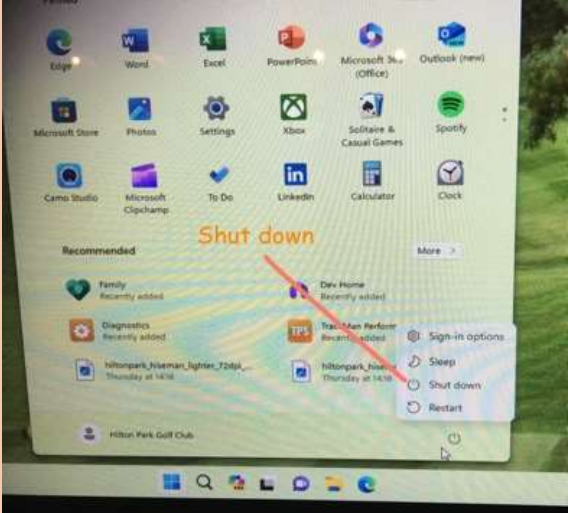




# Shutdown Procedure

<p>Step 1</p>	<p>Close your activity by clicking the icon next to Hilton park and then hit the 'exit' menu option that appears. If you have registered yourself with trackman for your session please sign-out by clicking or touching the sign out icon.</p>	
<p>Step 2</p>	<p>Switch off the spot light (right button on remote).</p>	
<p>Step 3</p>	<p>Switch off the projector (double press – the light on projector will turn to orange).</p>	
<p>Step 4</p>	<p>Switch of the amplifier.</p>	

<p>Step 5</p>	<p>Power off the Trackman launch monitor by pressing the button located on the base of the unit towards the right.</p> <p>This only needs to be undertaken every 3-4 days</p>	
<p>Step 3</p>	<p>Close down the Trackman performance studio software (click the 'three line' icon on the right of Hilton Park)</p>	
<p>Step 4</p>	<p>Use the mouse, or touch the bottom of the screen, to display the windows bar. Click or touch the 'Windows' icon.</p>	
<p>Step 5</p>	<p>Click or touch the close options icon.</p>	

<p>Step 6</p>	<p>Click or touch the shutdown menu option.</p>	 <p>A screenshot of the Windows 10 Start menu. The 'Shut down' option is highlighted in the bottom right corner of the Start menu. A red arrow points to the 'Shut down' option. The Start menu also shows various application icons like Edge, Word, Excel, PowerPoint, Microsoft 365 (Office), Outlook (new), Microsoft Store, Photos, Settings, Xbox, Solitaire &amp; Casual Games, Spotify, Camo Studio, Microsoft Clipchamp, To Do, LinkedIn, Calculator, and Clock. There is also a 'Recommended' section with items like Family, Diagnostics, and Hilton Park. A power button icon is visible in the bottom right corner of the Start menu.</p>
<p>Step 6</p>	<p>Lock computer cabinet.</p>	 <p>A photograph of a black computer cabinet. A red keychain is attached to a lock on the front of the cabinet. A yellow arrow points to the keychain. The text 'Open Lock' is written in yellow on the right side of the cabinet. The cabinet is sitting on a green artificial turf surface.</p>
<p>Step 8</p>	<p>Replace closure in front of the launch monitor and lock.</p>	 <p>A photograph of a black cabinet with two doors. A yellow arrow points to the top of the cabinet. The text 'Open Locks' is written in yellow on the front of the cabinet. The cabinet is sitting on a green artificial turf surface.</p>

Congratulations you have successfully shutdown the Indoor Golf Studio